

E285 CARTRIDGE

E285

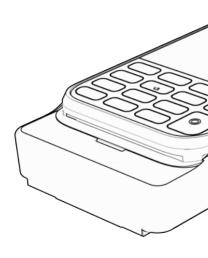

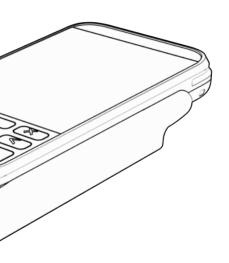



CONTENTS

What's	Included									1
Assemb	oly									3
Disasse	embly	 							:	11

WHAT'S INCLUDED

D:1








Cartridge Body (1)

Screw (1)

ASSEMBLY

1


Remove the Screw (D:2) from the included baggy.

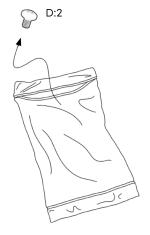

ASSEMBLY


2

Slide the E285 in the Cartridge Body (D:1).

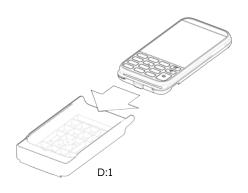

3


Screw the E285 to the Cartridge Body (D:1).

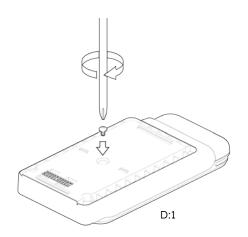


ASSEMBLY



 Slide the NOCC plate (E) to the side to remove it from the Core (B).



 Slide the feet of the Cartridge
(D) into the slots on the Core (B)
until it clicks.



Attention

To continue the assembly process, please refer to the Get Started instruction booklet.

Attention

DISASSEMBLY

Attention

 
Please refer to the Get Started instruction booklet to begin disassembly.

Attention


DISASSEMBLY

1

Slide the feet of the Cartridge (D) out of the slots on the Core (B) to release.




Remove the Screw (D:2) from the Cartridge Body (D:1).

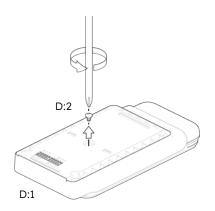

DISASSEMBLY

3

Slide the E285 out of the Cartridge Body (D:1).

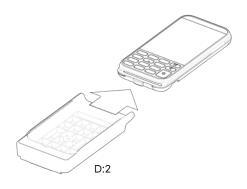

Disassembly Complete



